



# YOUR FREE FLIGHT

## C-10 PULL TRIGGER

RIGHT HAND    SMALL     MEDIUM     LARGE     X-SMALL     X-LARGE

**THE FREE FLIGHT IS NOT A TYPICAL RELEASE. THERE ARE SAFETY WARNINGS, FEATURES, TIPS YOU NEED TO KNOW ABOUT. IT IS IMPORTANT THAT YOU READ AND UNDERSTAND ALL OF THIS INFORMATION BEFORE YOU PUT IT ON. READ AND KEEP FOR FUTURE REFERENCE.**

Find the allen wrench for trigger adjustments inside the shipping box.

A new glove until broken in will keep the trigger down and away from your trigger finger. To bring the trigger up into position, the leather needs to be stretched around the mechanism. With the glove on your hand take the mechanism in your other hand and twist it up "VERY" hard going way past the point of hard resistance. Do this a few times until the trigger starts to stay up. You cannot hurt the glove doing this.

To engage the C-10 without making a click sound, pull and hold the trigger, letting go after the serving is engaged in the slot. To close the Loop Hook quietly, push mechanism into any surface of your clothing, releasing the trigger to lock it up.

Everything about this release needs to be broken in. The leather needs to form to your hand and the parts need to seat themselves. It is shipped with maximum safe trigger travel and is designed for safety and not to fix target panic by using an unsafe trigger. It is recommended you give it at least fifty shots before adjustments, this allows the sears to seat themselves. If you still need a shorter trigger find the set screw hole at the top of the trigger. There are two set screws tightened together. Take the first one out and turn the inside screw clockwise to lighten and shorten the travel. Notice the screw going through and making contact with the case. Watch the trigger move as you turn the set screw in, it is putting the sears closer to their separation. At this point use "VERY" small increments, testing the trigger to make sure there is enough sear to hold it before making a draw. Put in the second set screw and snug the two of them together. To keep both from turning in while tightening, push the trigger forward keeping pressure on it. This pushes the first screw against the case securing its position. *Readjust trigger periodically as time will change the trigger action.*

For customer service, shooting tips and important information visit

[WINNARCHERY.COM](http://WINNARCHERY.COM)

Winn Archery Equipment  
13757 64th Street  
South Haven, MI 49090